



Start at the top, work your way down.

The Shure is for the wireless microphone.

The box with the red light is for the tv/channel one. This must be off (blinking) to display A/V from a computer.

The K with the green light sends computer signals to the projector and the televisions. Must be on for channel one/tv/cable.

The amplifier is this unit on the bottom. Dials and selectors marked with a white dot should not be moved, or in the case of volume knobs, should not be moved past the white dot. Turn this unit on last.

The microphone should only be turned on and off, using the small switch on top.

The group/channel must match the receiver in the cabinet.



Kworld Remote:

Change Channels, power off to show images from computer.



Epson Remote:

Projector power on/off change source to show from RCA



TV Remote:

Power on tv's

Near the corner to the hallway, on the left side, if you face the same way as the projector, on the far left hand corner is this box: You may plug in a network cable, the computer and some microphones. You may also use the wireless microphone, included in the cabinet. All hook-ups are one way plugs, so please do not force them, nor attempt to plug anything in what does not have these types of connections:

RCA, VGA, 3.5mm audio, 3Pin Audio microphones.



Plug in Microphone 1 and 2 here. Control the volume at the rack.

Plug in Computer, and 3.5MM cable in here. Can also select to view via RCA, but will only output video to the projector. VGA can output to projector and both TV's simultaneously.

Plug in network cable here, to access the internet and/or any network services, such as the home directory or printers.